

Tactical 4x4 LR3/LR4 Rear Bumper Installation Instructions

***Please read through all instructions before beginning installation.

1. Remove tail light and two screws on the inside edge of the light assembly. Carefully pop assembly off body of vehicle and unplug wires.
2. Remove rear section of fender flares.
3. Unplug rear wire harness from the driver's side near tail light area.
4. Remove plastic bumper cover: remove the following
 - a. 4 plastic buttons on top of the plastic bumper under the tail gate.
 - b. 1 screw in the tail light area on both sides
 - c. 4 screws underneath bumper
 - d. 2 screws per side up by rear wheel, one high, and one low
 - e. Pop plastic bumper off snap clips around curve of quarter panel
 - f. Carefully pull plastic away and remove wire harness and sensors (if applicable)
 - g. Remove the plastic snap clip sections from the body using a 10mm wrench

Now you are ready to Install your Tactical 4x4 bumper.

Note: If you choose to re-install the back-up sensors, do so before placing the Tactical 4x4 bumper on the vehicle. There are 4 metal tabs under the tail gate that need to be slightly pushed down so they won't come in contact with the bumper.

1. Remove all mounting hardware from bumper. 2 large bolts on the main mount tubes and 2 small bolts from the end of the quarter panel wings.
2. With the tailgate down, place the new bumper on the frame/bumper support. Guide the mount tubes through the holes in the frame/bumper support and the bumper will sit in place on the frame/bumper support. **Note:** If you are re-installing the sensors, be very careful when placing the Tactical 4x4 bumper so you do not pinch or damage the sensor wiring harness.
3. Install 2 main bolts loosely, accessing through spare tire area. Install two bolts in the front of the wings in the existing holes at the bottom edge of quarter panels. If you are re-installing the sensors, plug the harnesses in at this time.
4. Check fit of bumper, close tailgate, adjust if needed, then secure all bolts.
5. Re-attach fender flares.
6. Re-install tail lights. Replace plugs, place tail light in position, push into place, and put in the two screws previously removed.

For technical support please contact Tactical 4x4 via e-mail at info@tacticalrovers.com or by phone (951)239-6236

Tactical 4x4, *Giving you the Tactical Advantage!*